

PART NUMBER	DESCRIPTION
F100	FUSION CUTTER W/CASE
F101	BASE PLATE
F102	INTERMEDIATE PLATE
F102A	RISER PLATE
F102B	BUSHING, INTERMEDIATE PLATE
F103	TOWER
F103A	BUSHING, TOWER
F104	SIDE PLATE
F105	PRESSURE PAD
F106	BEARING SLEEVE
F106A	BEARING, CLEVIS W/SLEEVE
F107	CAM
F107A	BEARING, CAM
F108	HANDLE
F111	BOLT, TOWER
F115	DOWEL PIN, BASE PLATE
F116	DOWEL PIN, SIDE PLATE
F117	DOWEL PIN, CLEVIS
F118	DOWEL PIN, TOWER
F119	BOLT, CUTTER
F120	ROLL PIN, CLEVIS
F121	ROLL PIN, SHAFT
F122	SPRING, TOWER
F123	SPRING, EJECTOR BAR
F124	EJECTOR BAR
F125	CLEVIS
F126	SHAFT
F127	USE PART #F128 (ASSEMBLY)
F128	CUTTER ASSEMBLY
F128A	BLADE HOLDER ONLY
F128B	BLADE, 1"
F128C	BLADE, 6"
F130	CASE, FUSION CUTTER